EVOTECH®

PERFORMANCE


Installation Instructions

YAMAHA XSR700
TAIL TIDY


Product Reference - 13238


Kit Contents


- (A) 1 x Main Tail Tidy
- (B) 1 x Indicator Bracket
- (C) 1 x Plastic Undertray
- (D) 1 x Reflector and Bracket
- (E) 1 x LED Light Unit (with nuts attached)
- (F) 1 x Stainless Mounting Boss
- (G) 1 x Wiring Connector
- (H) 1 x M5 - 16 Black Button Screw
- (I) 1 x M5 Black Washer
- (J) 2 x Plastic Spacers
- (K) 2 x Plastic Nuts and Screws
- (L) 2 x M6 - 16 Black Button Screws
- (M) 2 x M6 Nyloc Nuts
- (N) 2 x M6 Black Washers
- (O) 2 x M5 Nyloc Nuts
- (P) 2 x M4 Nyloc Nuts
- (Q) 3 x Undertray Tabs
- (R) 3 x M4 - 8 Black Button Screws
- (S) 5 x M4 Black Washers
- (T) 5 x Cable Ties
- (U) 8 x M5 - 10 Black Button Screws
- (V) 2 x M6 - 25 Black Button Screws

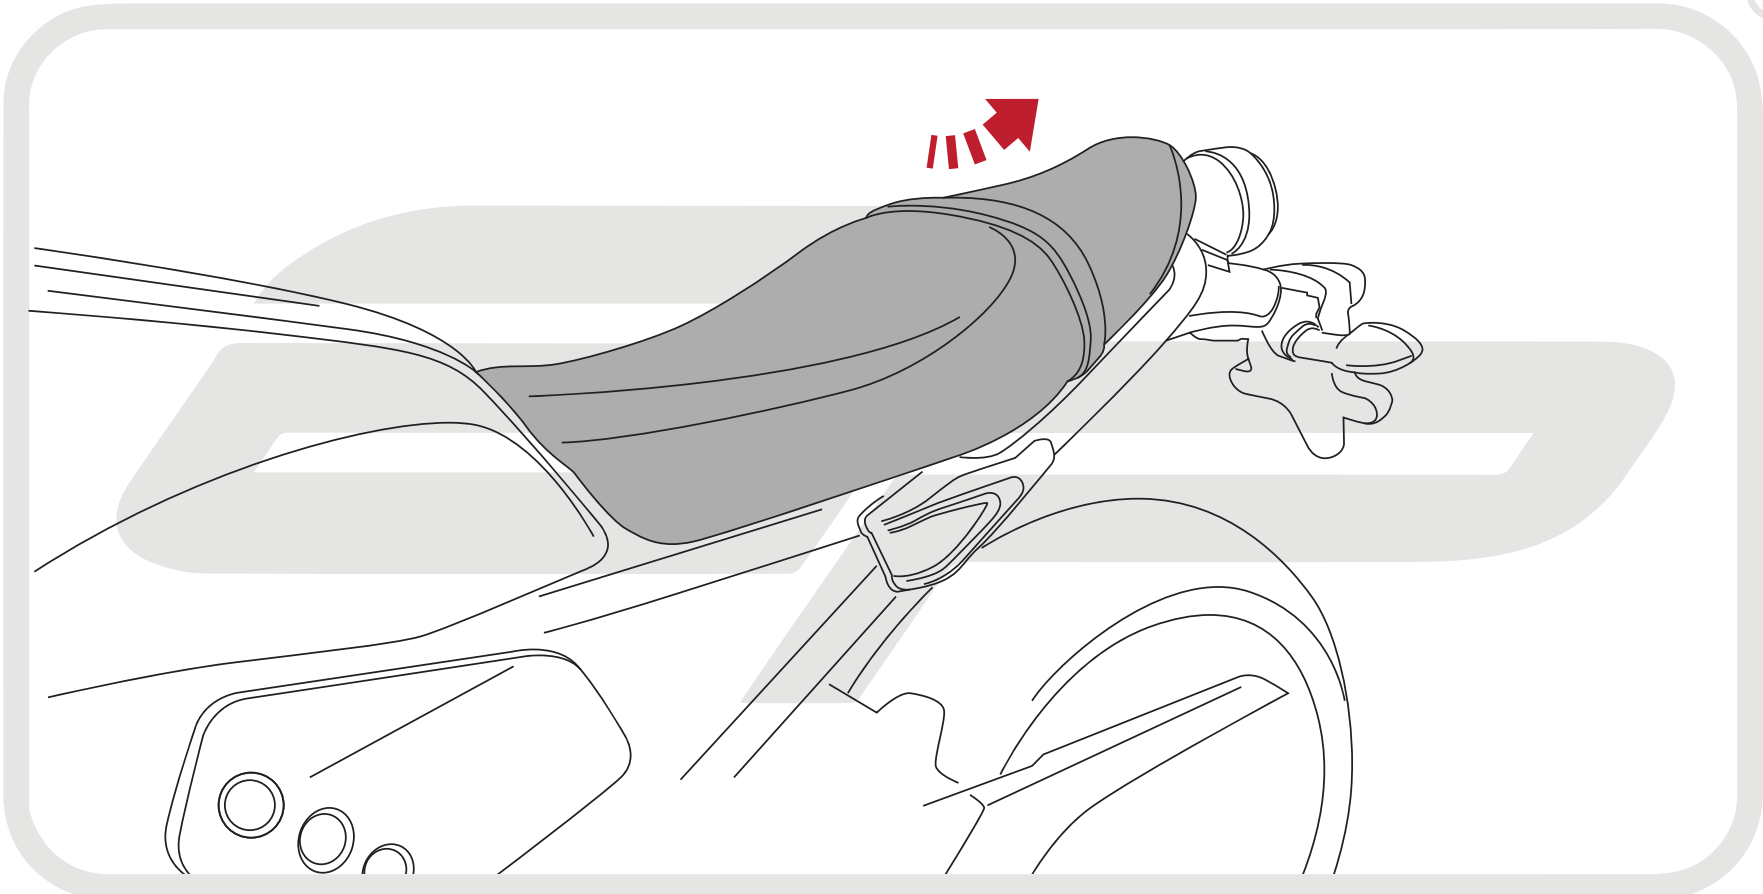



EVOTECH®
PERFORMANCE

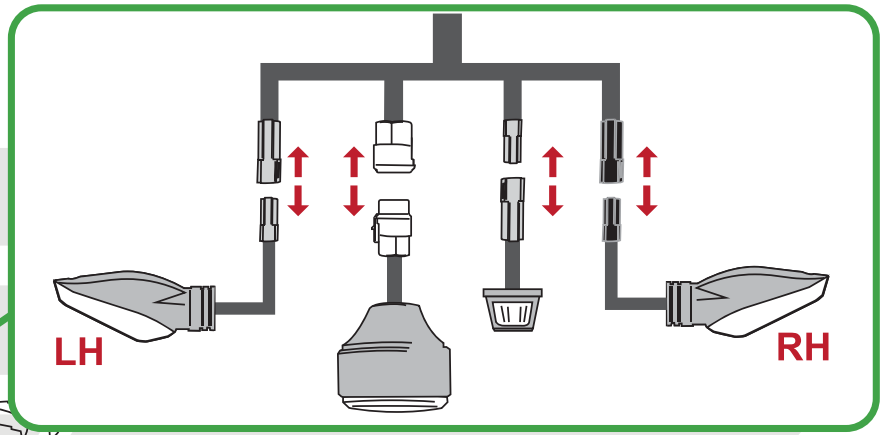

LH
RH

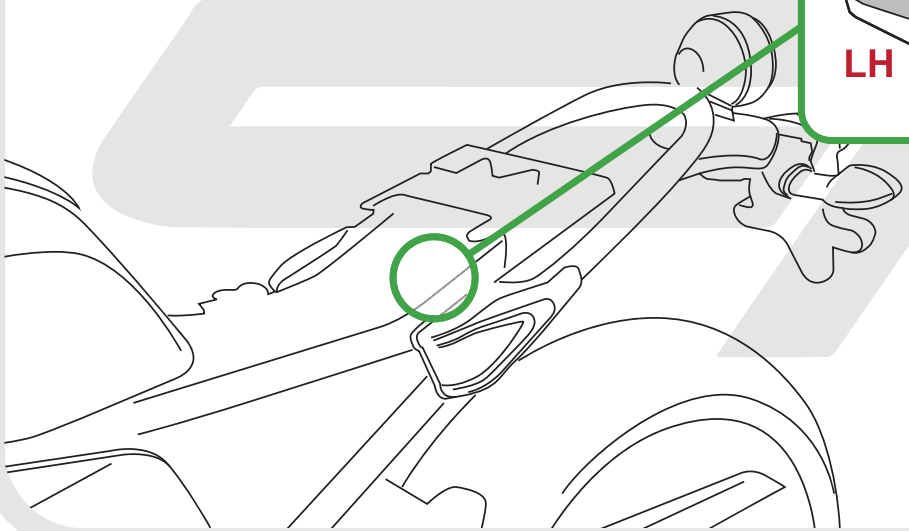

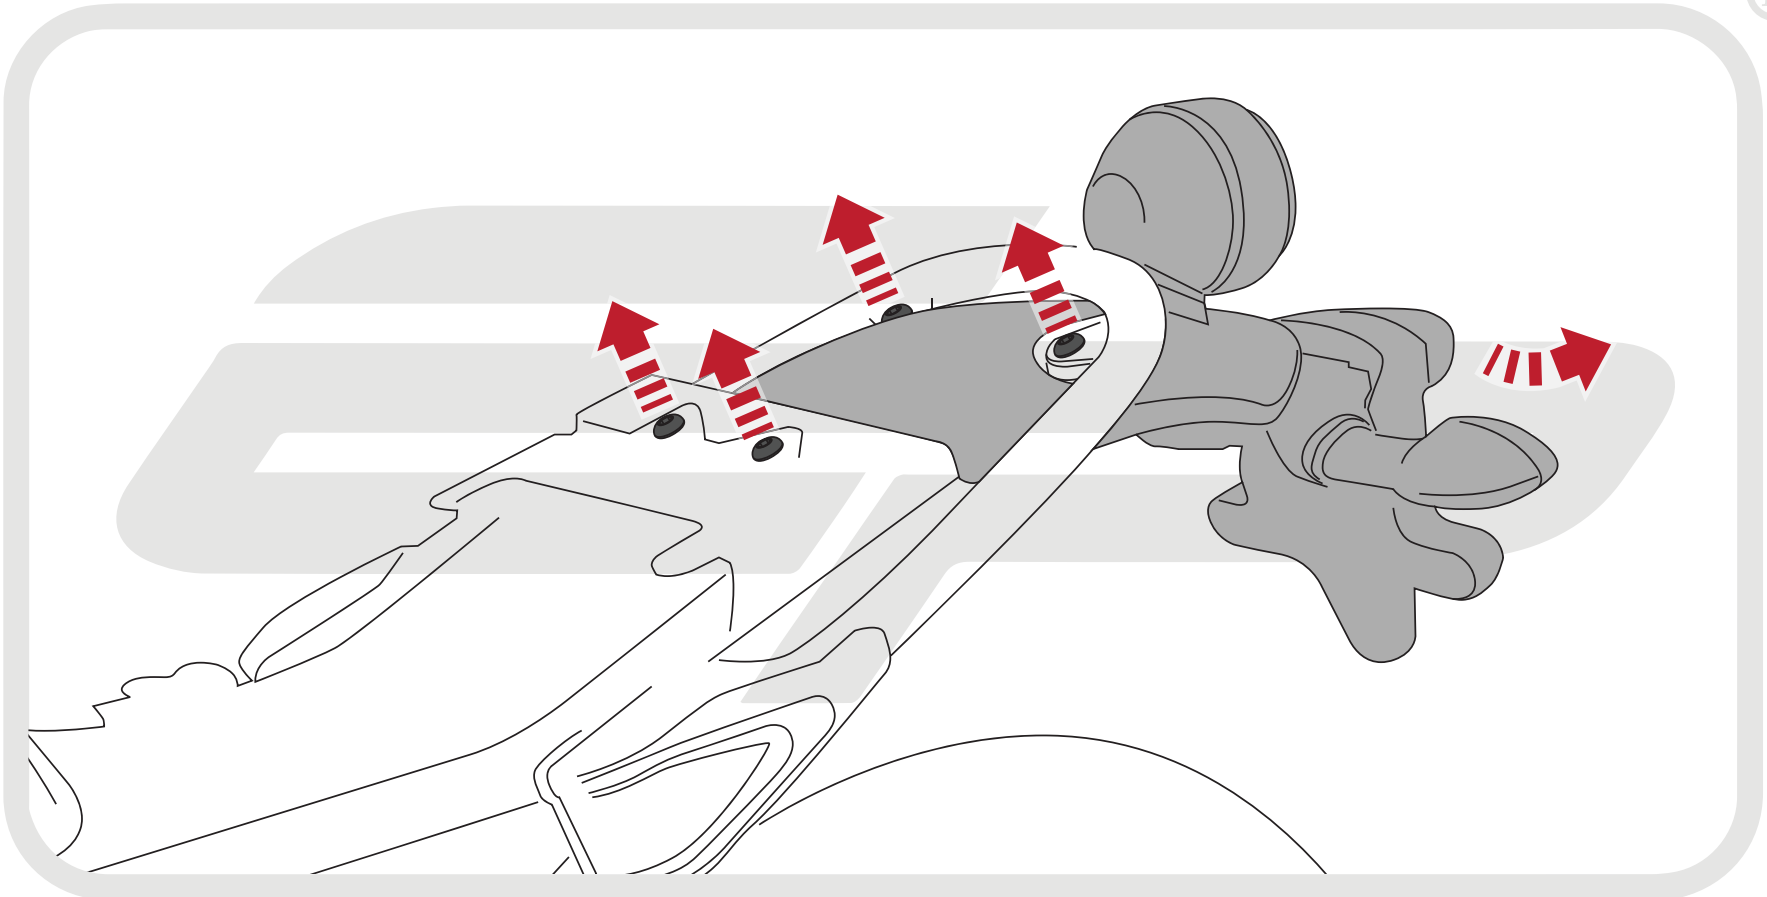


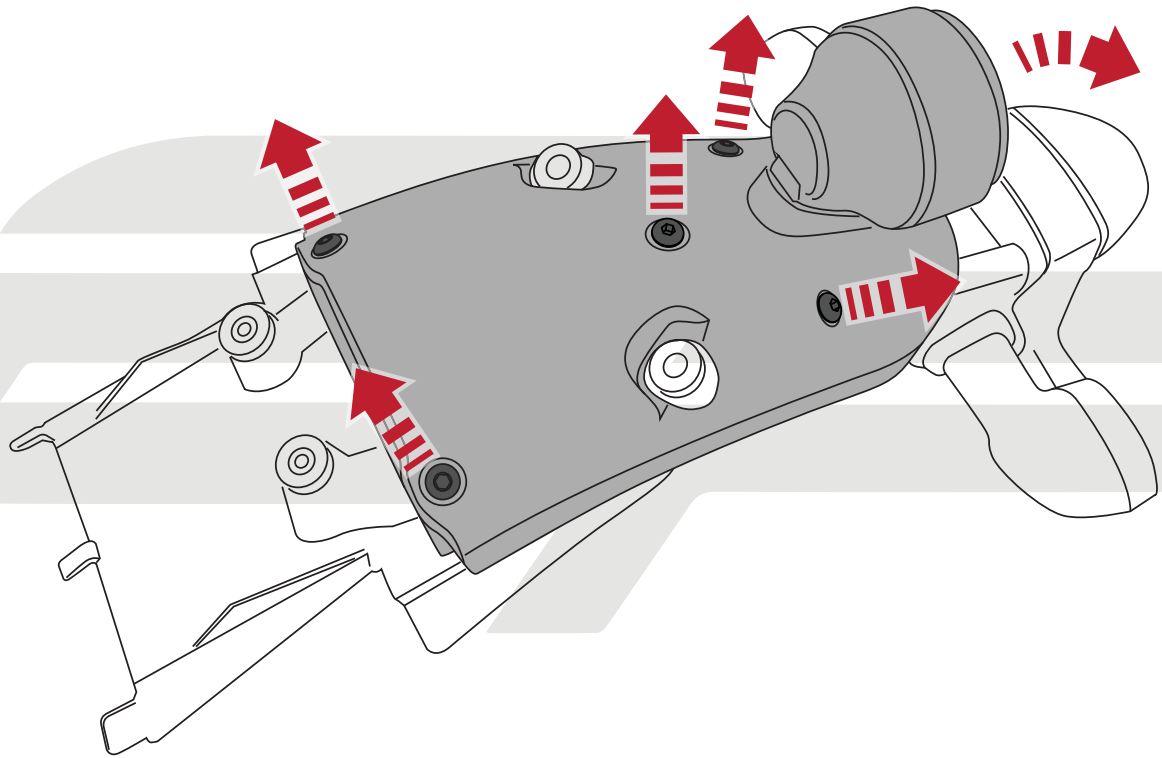


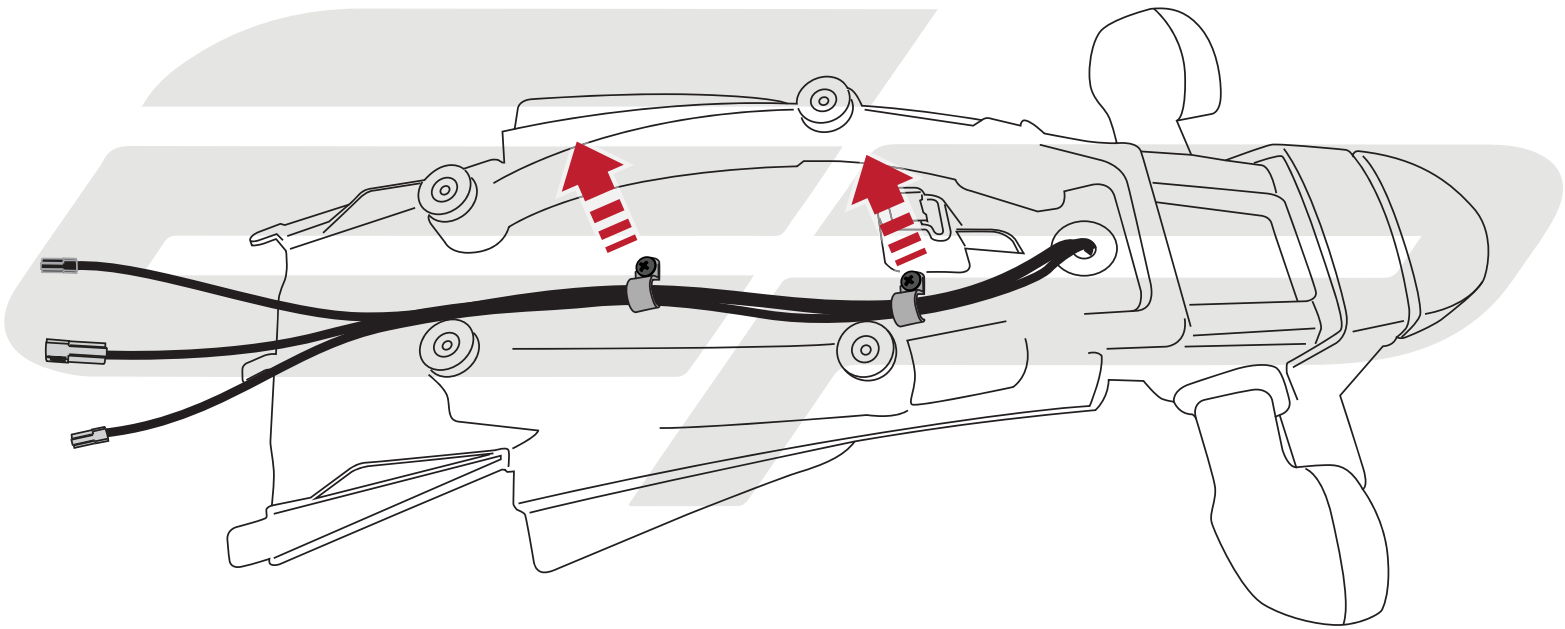


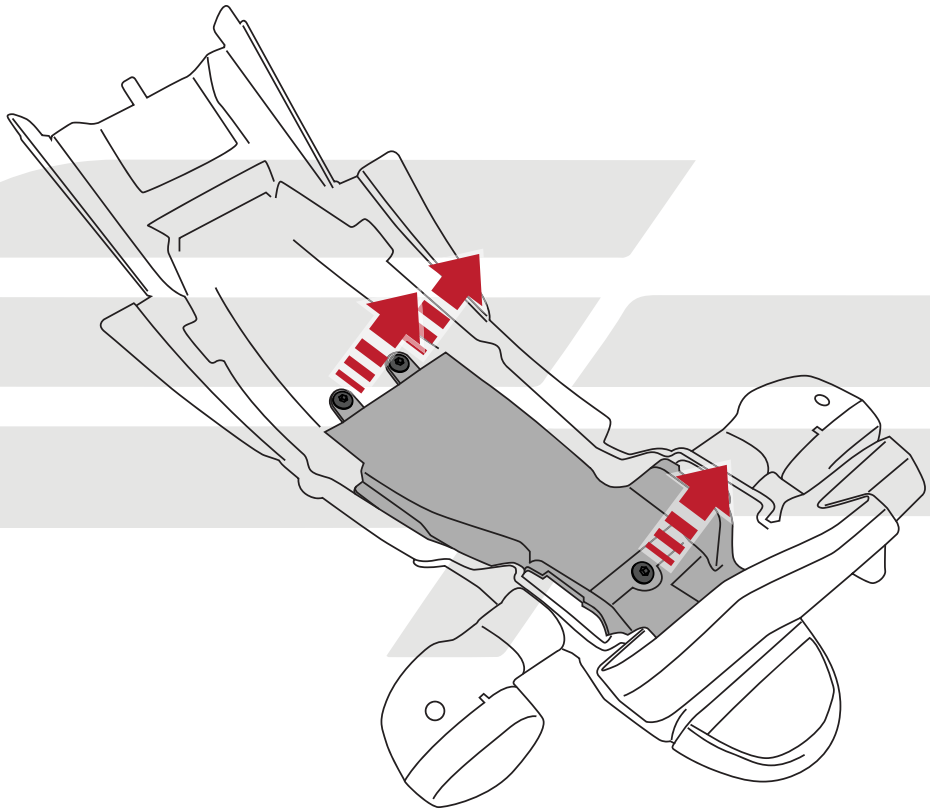

EVOTECH®
PERFORMANCE

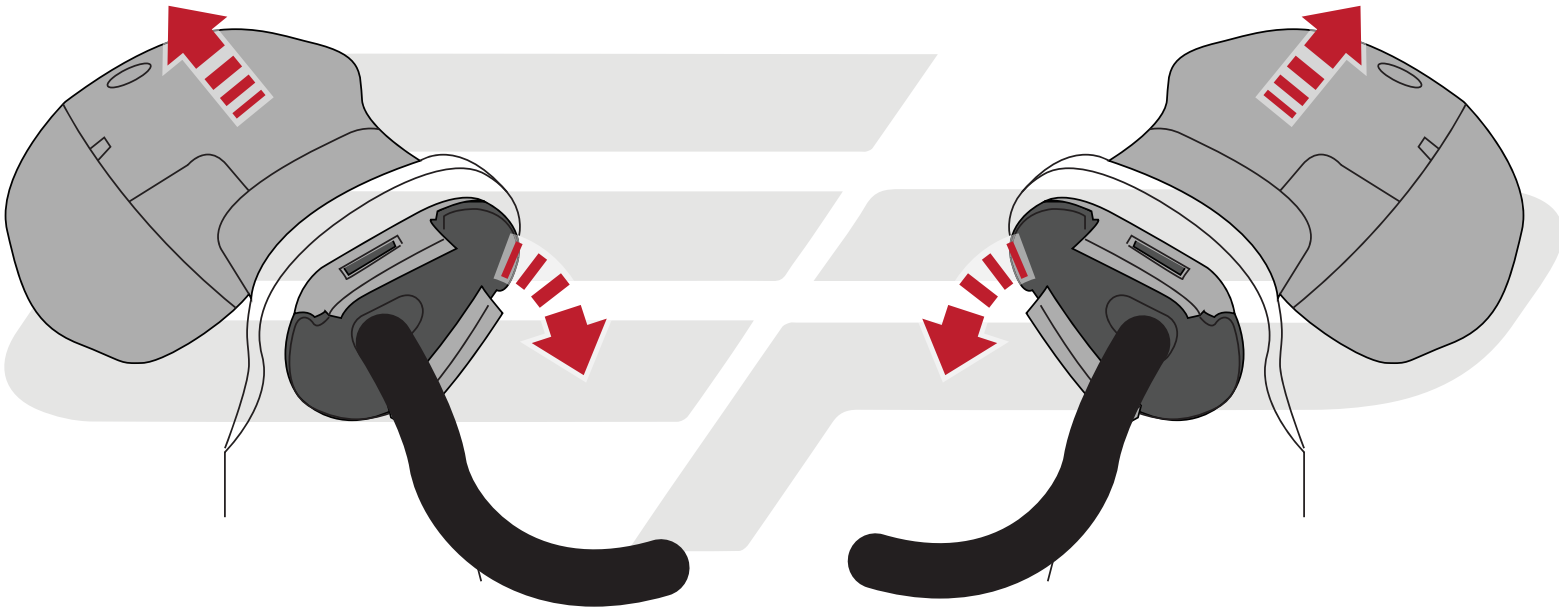


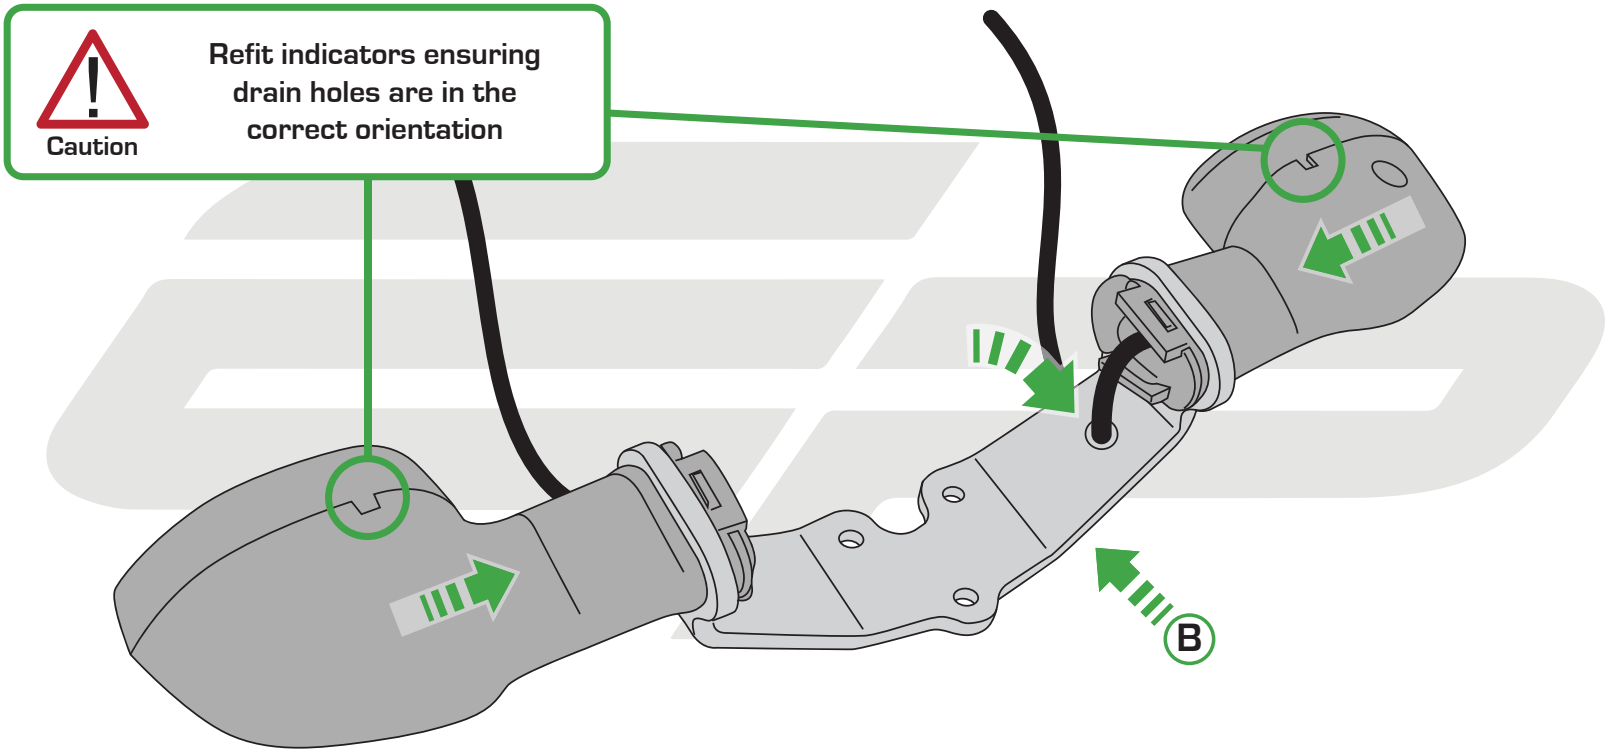
Caution
Refit indicators ensuring drain holes are in the correct orientation
B

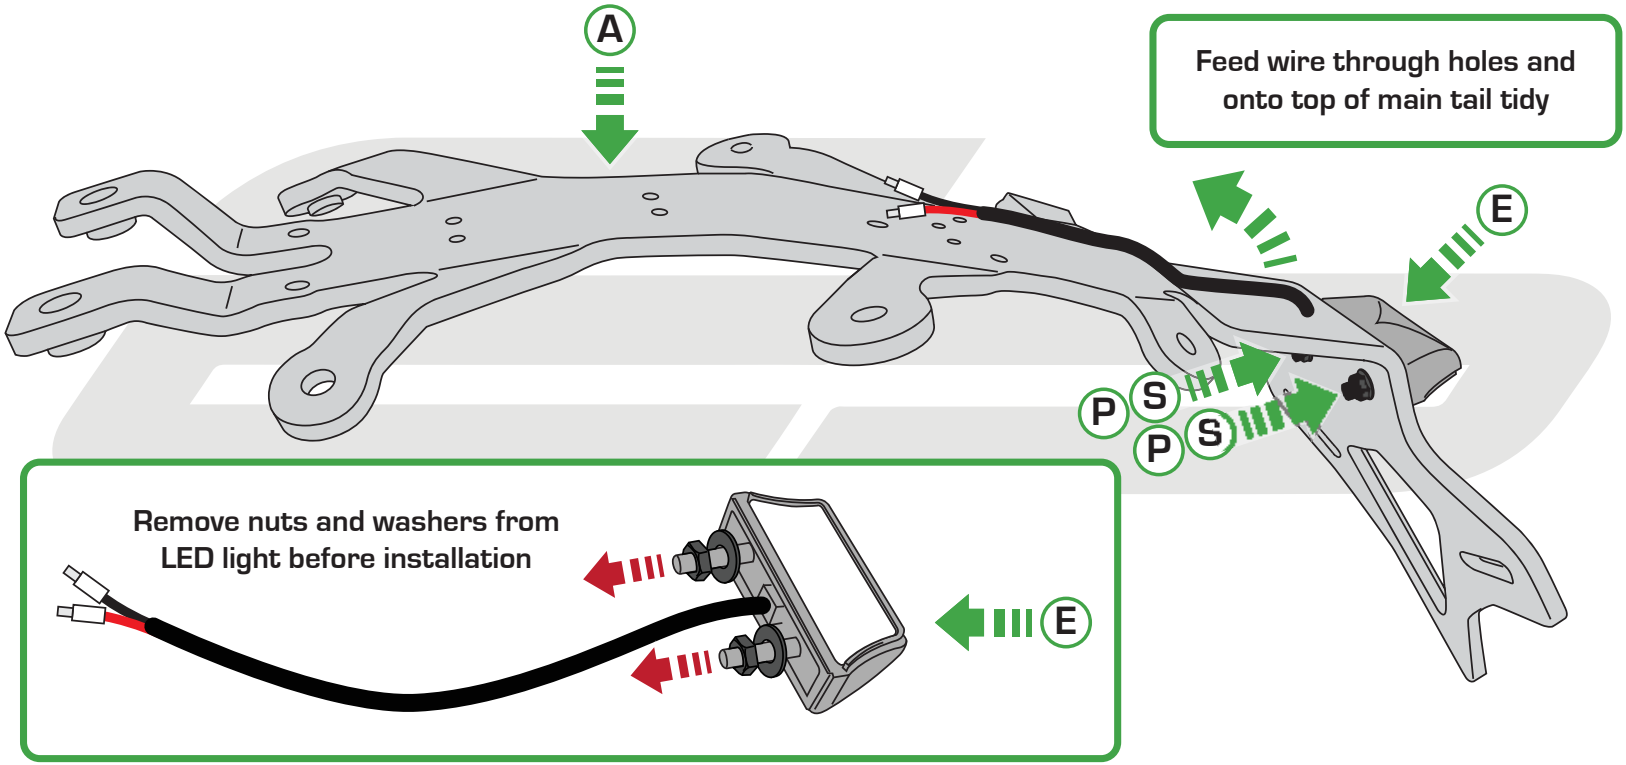
A
Feed wire through holes and onto top of main tail tidy
E
P
S
P
S
Remove nuts and washers from LED light before installation
E


Caution


Follow this stage if bike has paniers fitted.
If NOT running paniers please move
on to the next stage

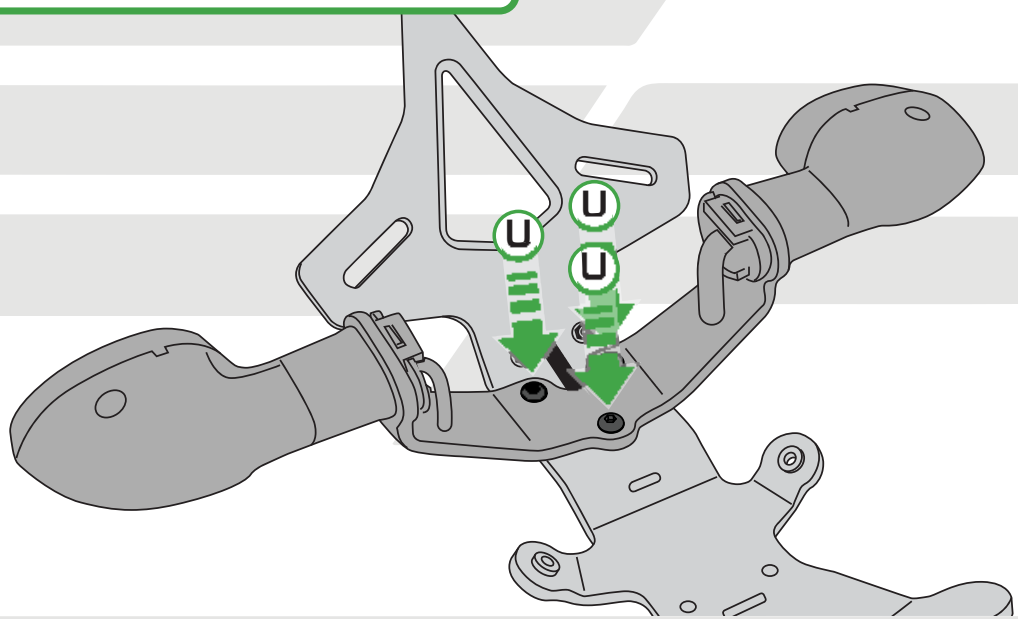

Caution

Follow this stage if bike has paniers fitted.
If NOT running paniers please move
on to the next stage

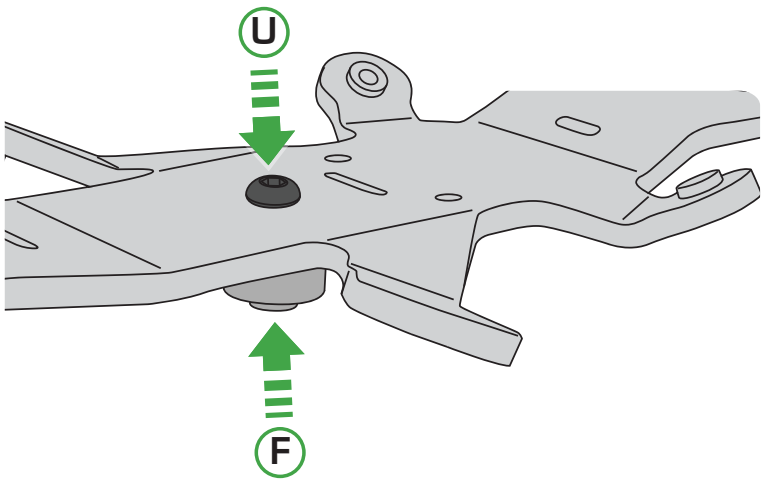

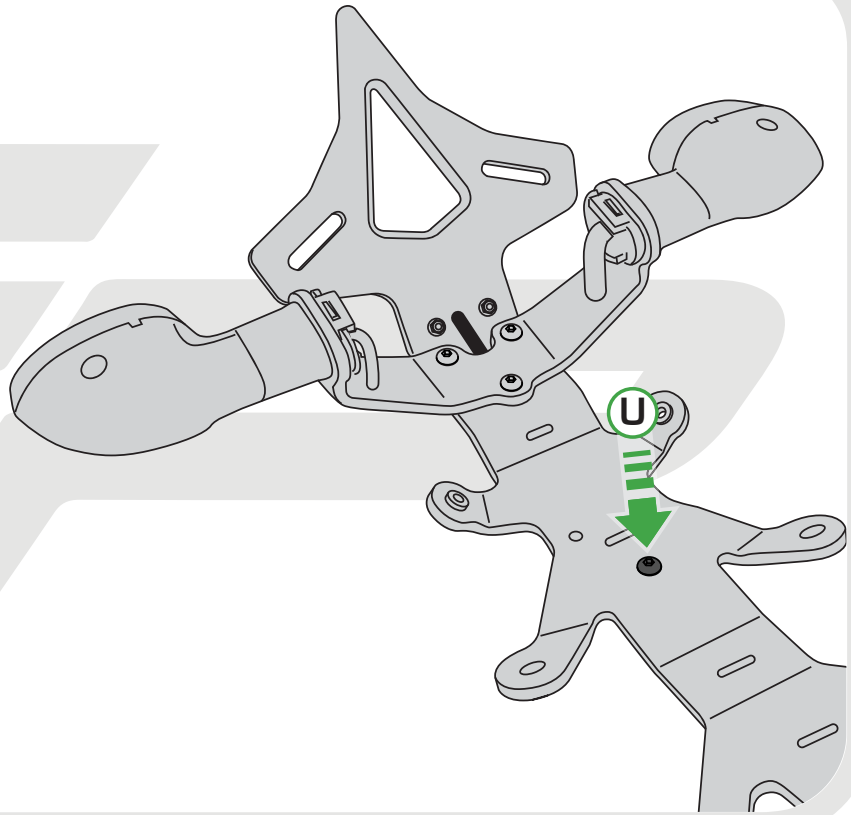


Caution

Follow this stage if NOT running paniers or wish indicators to be mounted further up underneath the seat


Caution

Leave cable tie open at this stage

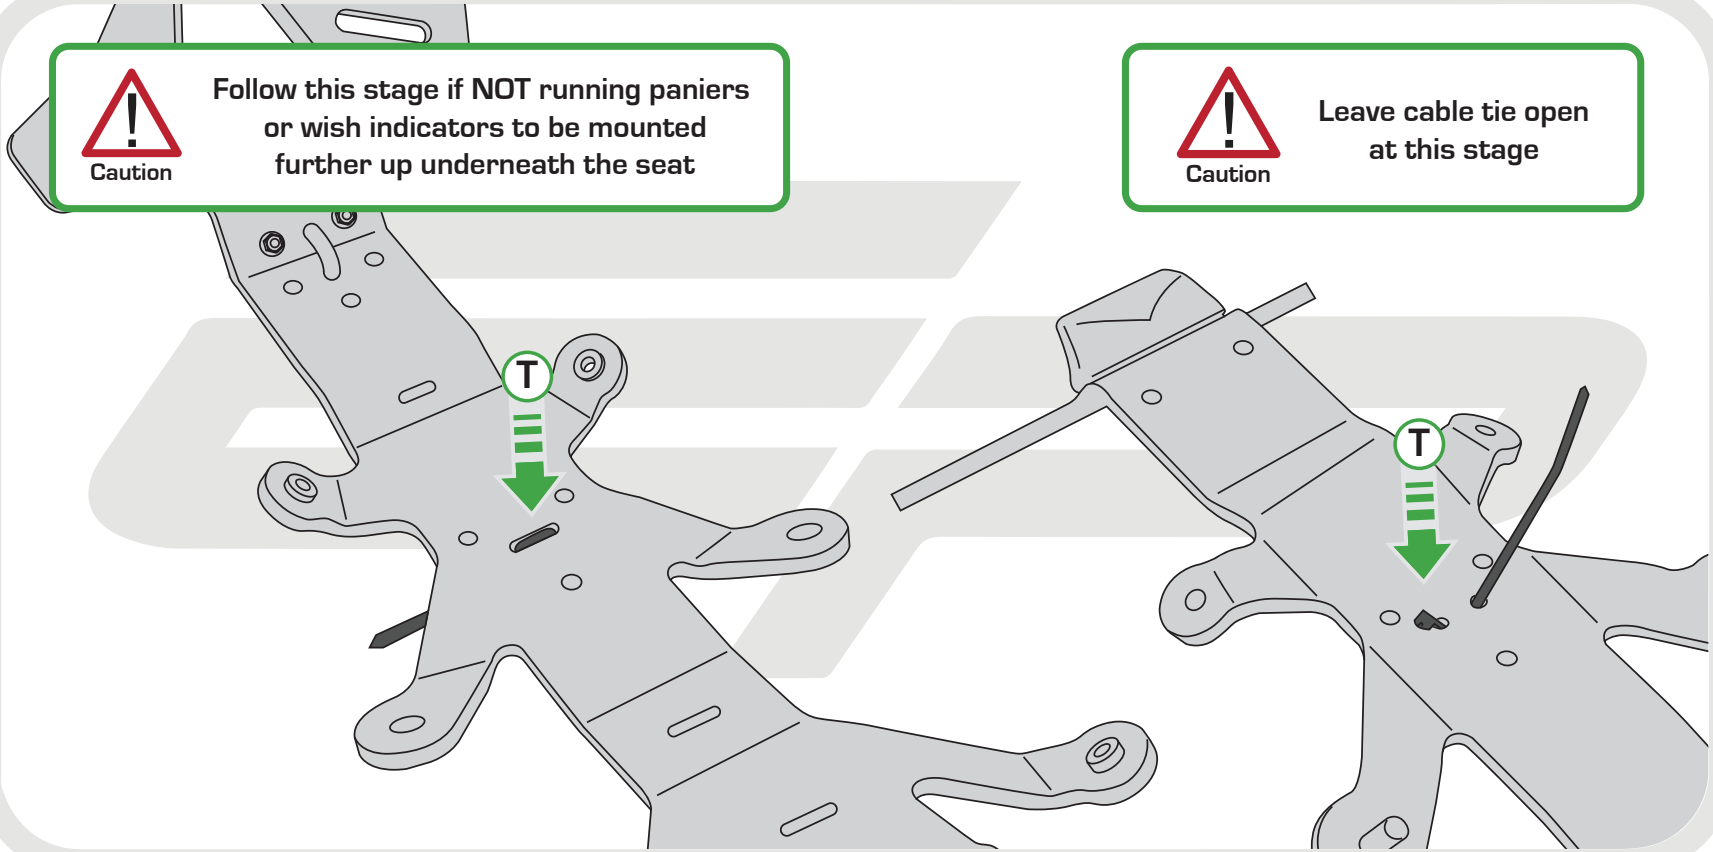


Caution


Follow this stage if NOT running paniers or wish indicators to be mounted further up underneath the seat

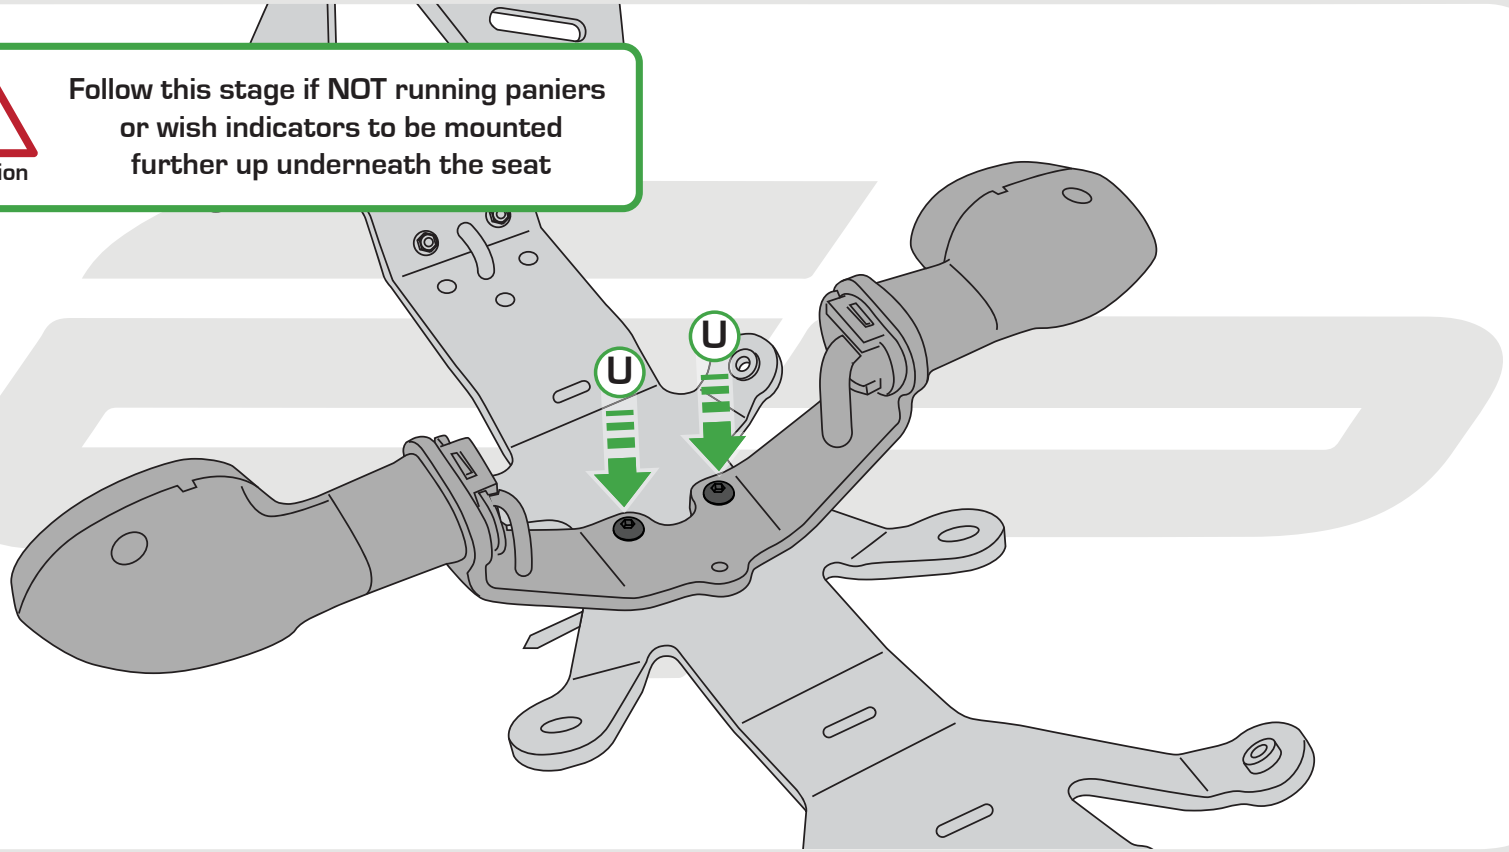



Caution

Follow this stage if NOT running paniers or wish indicators to be mounted further up underneath the seat

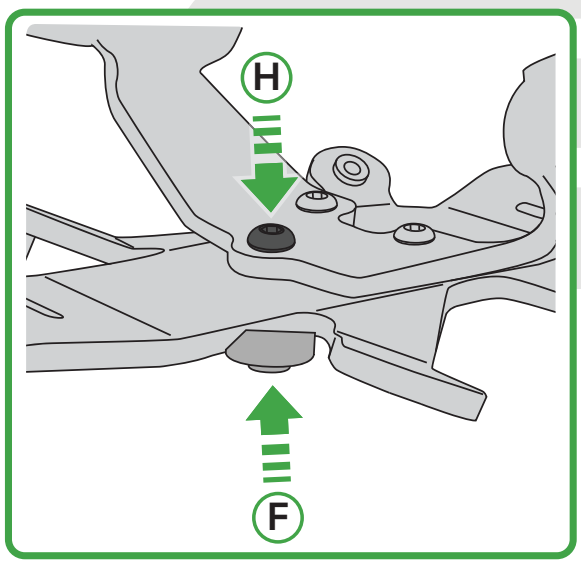


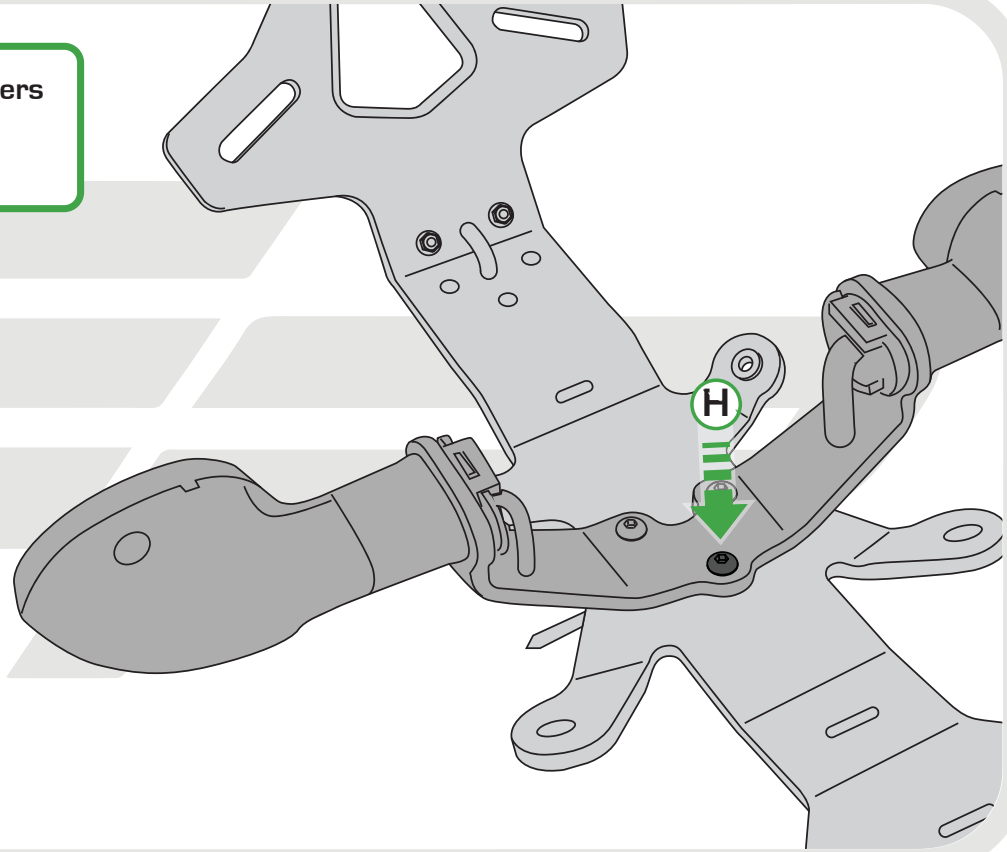

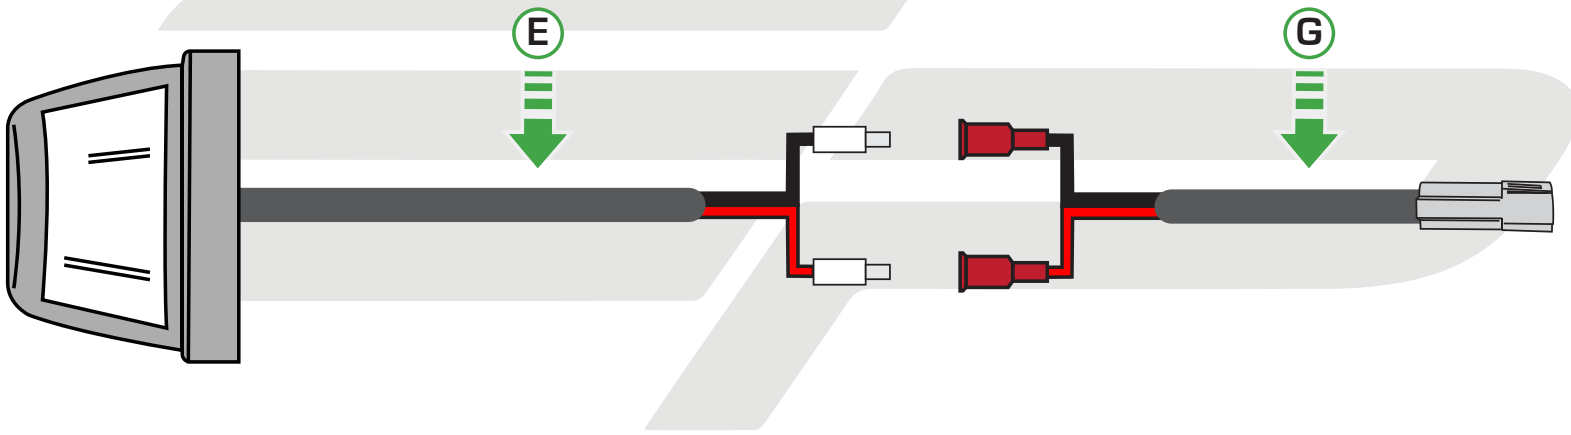

E
G

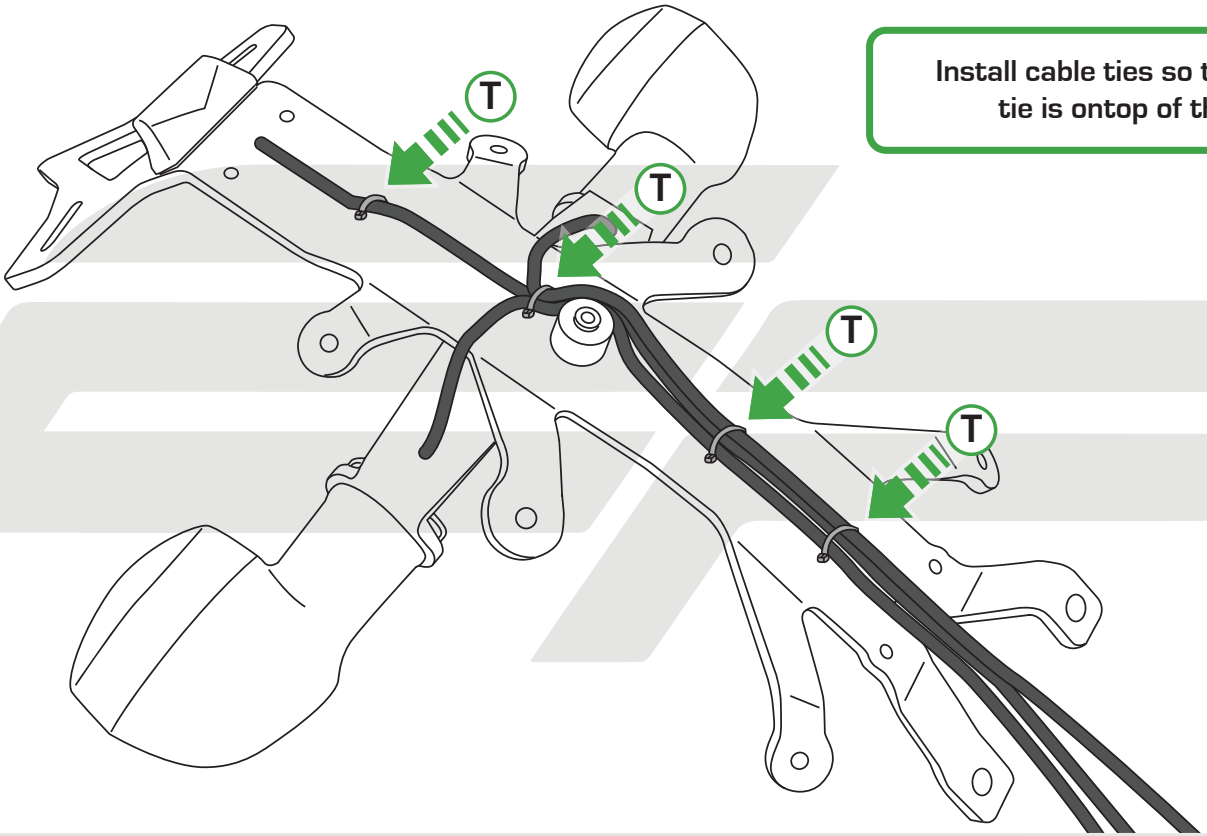


Install cable ties so the head of the tie is ontop of the tail tidy

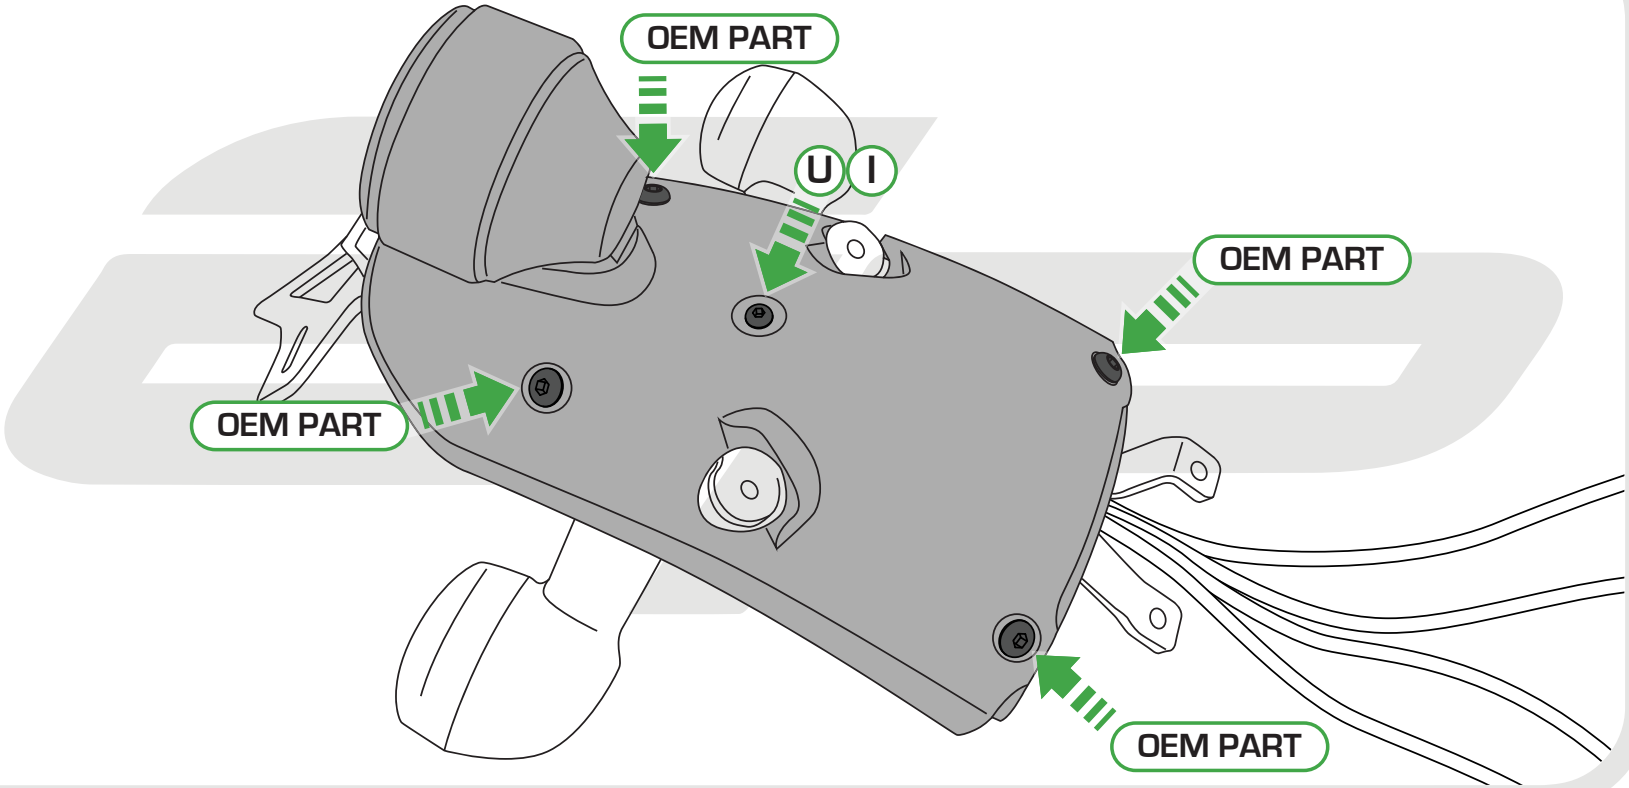



EVOTECH®
PERFORMANCE

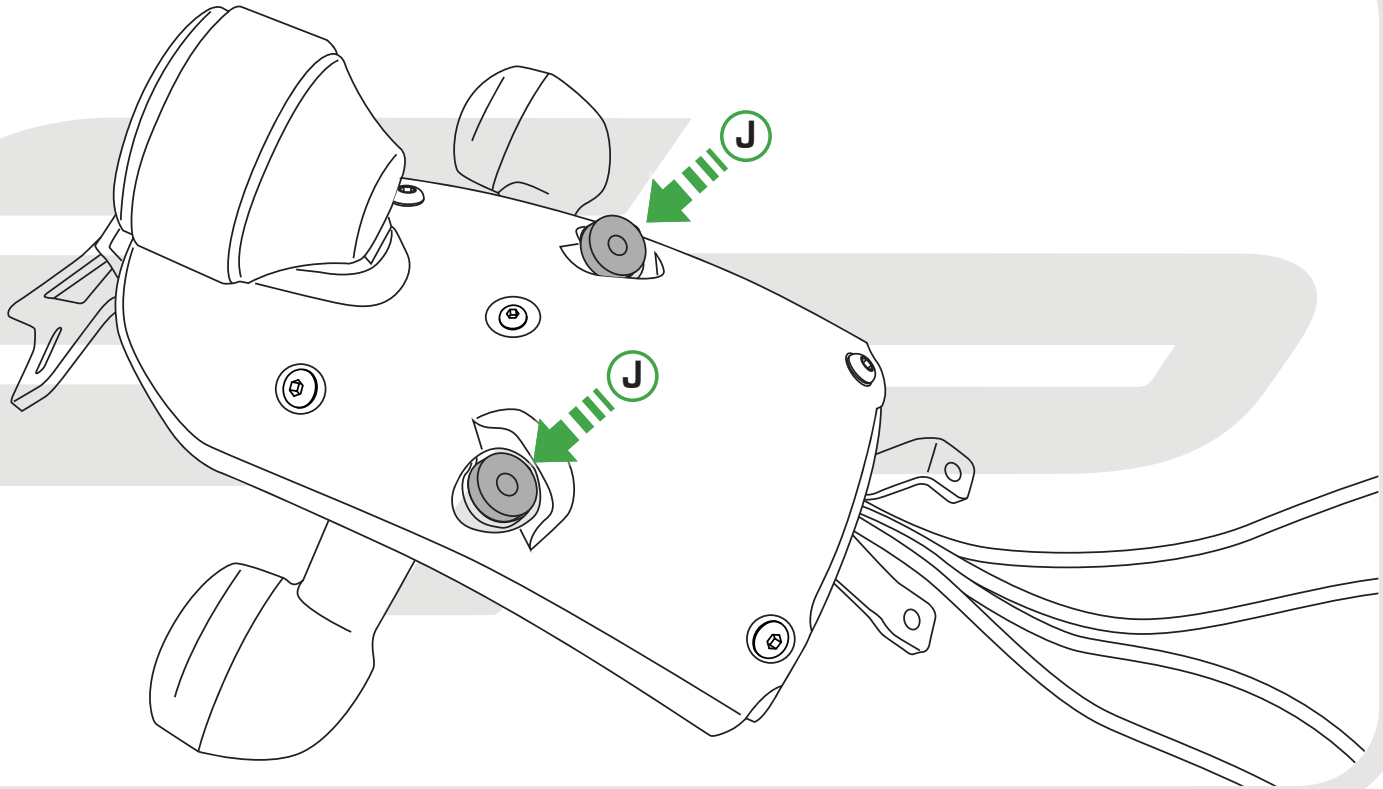



EVOTECH®
PERFORMANCE

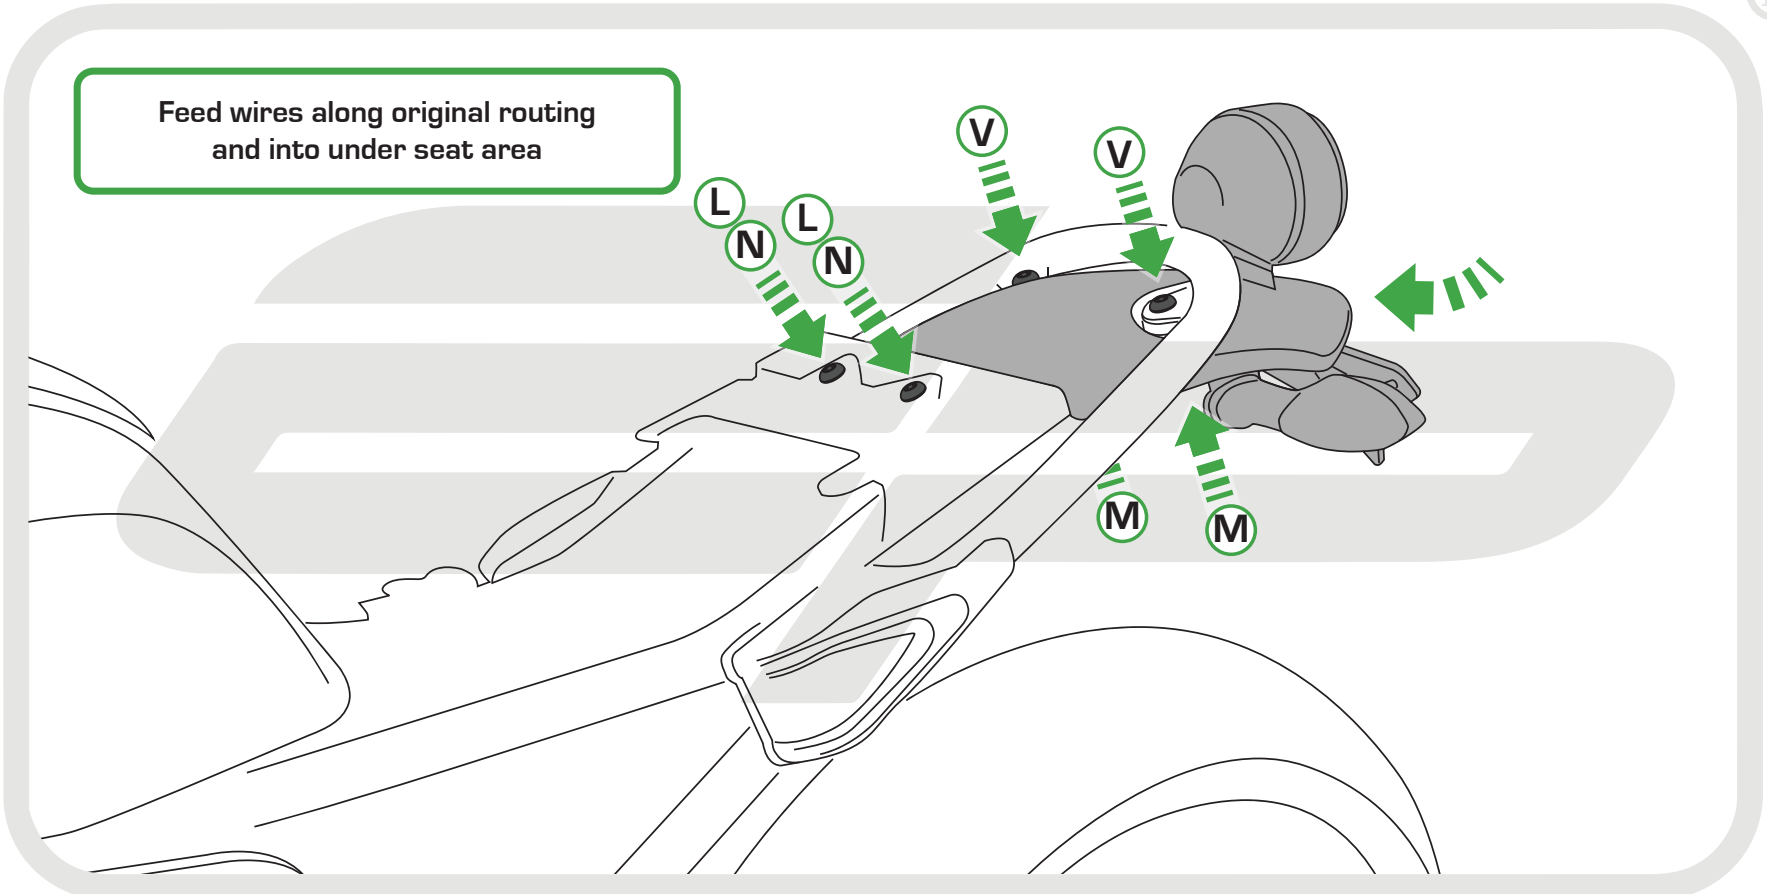
Feed wires along original routing
and into under seat area
L
N
L
N
V
V
M
M

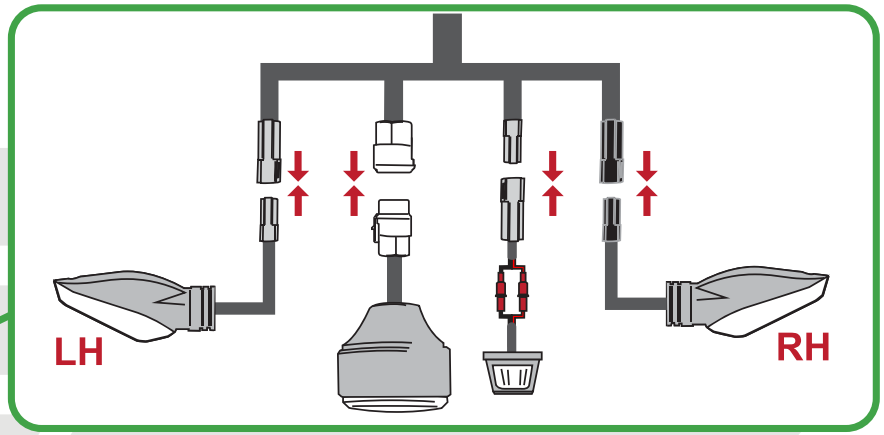

LH
RH

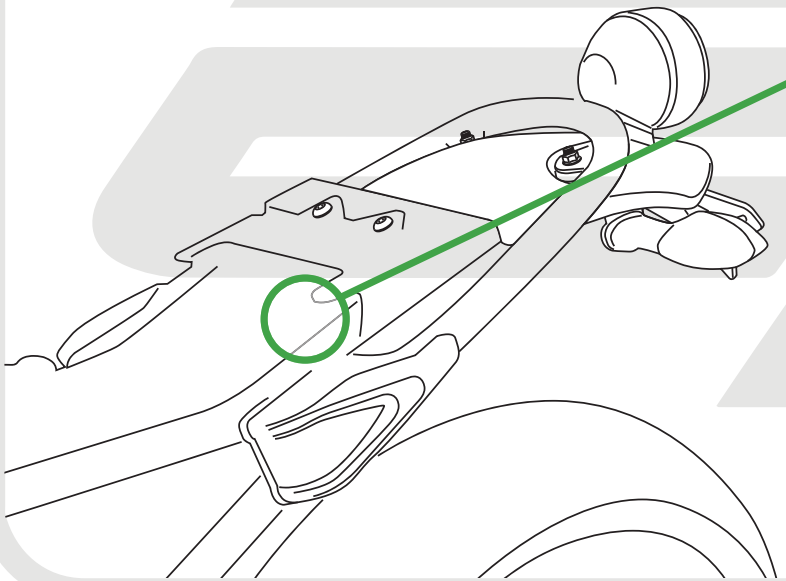

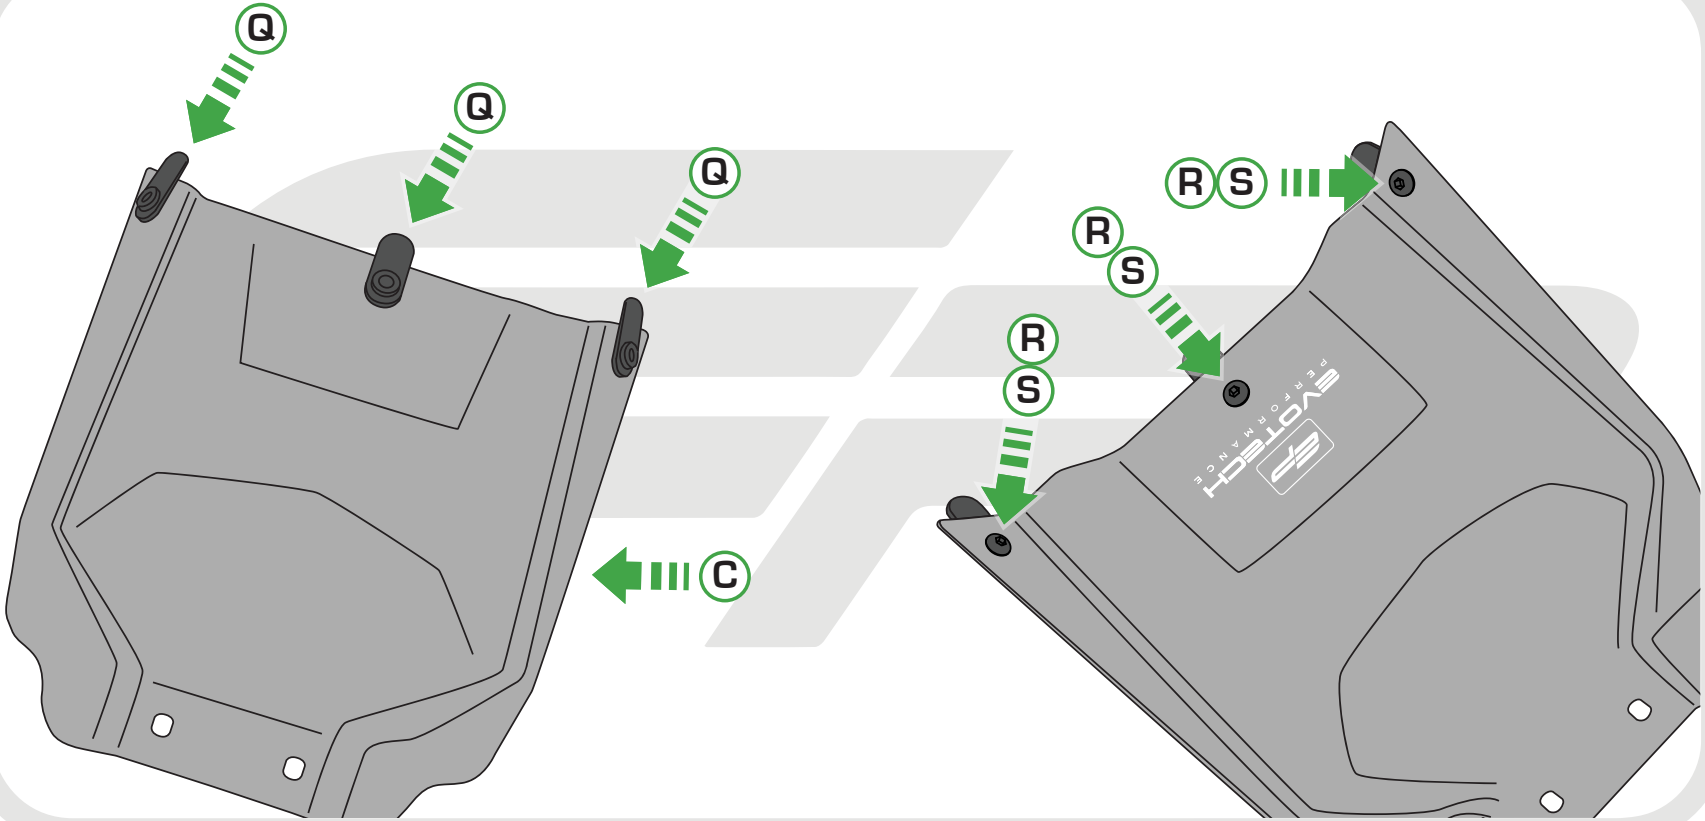
Q
Q
Q
C
R
S
R
S
R
S
EVOTECH
PERFORMANCE

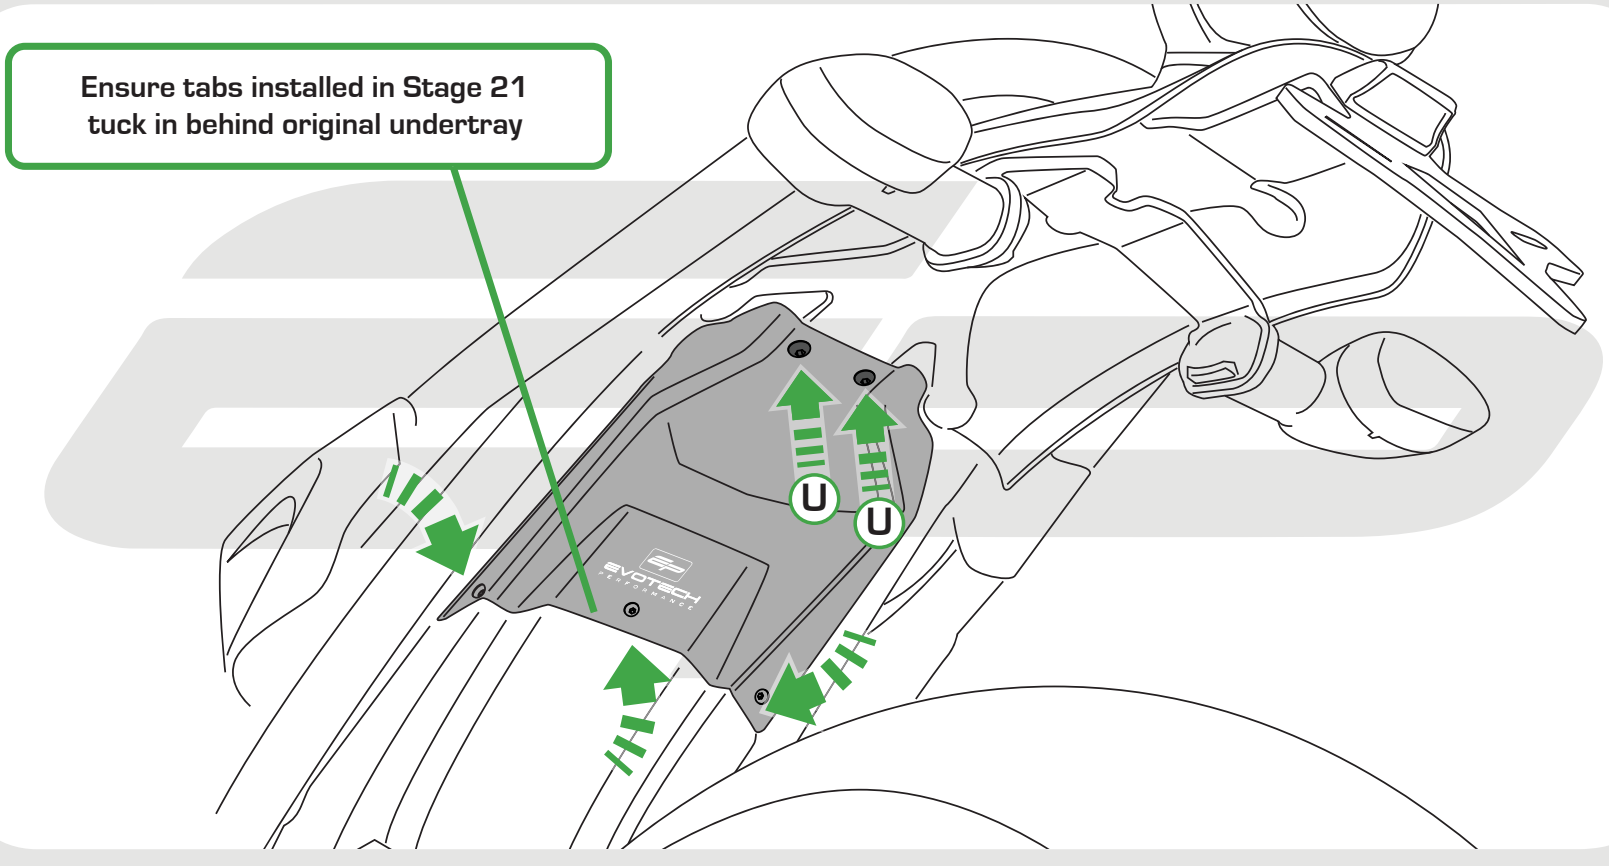


EVOTECH®
PERFORMANCE

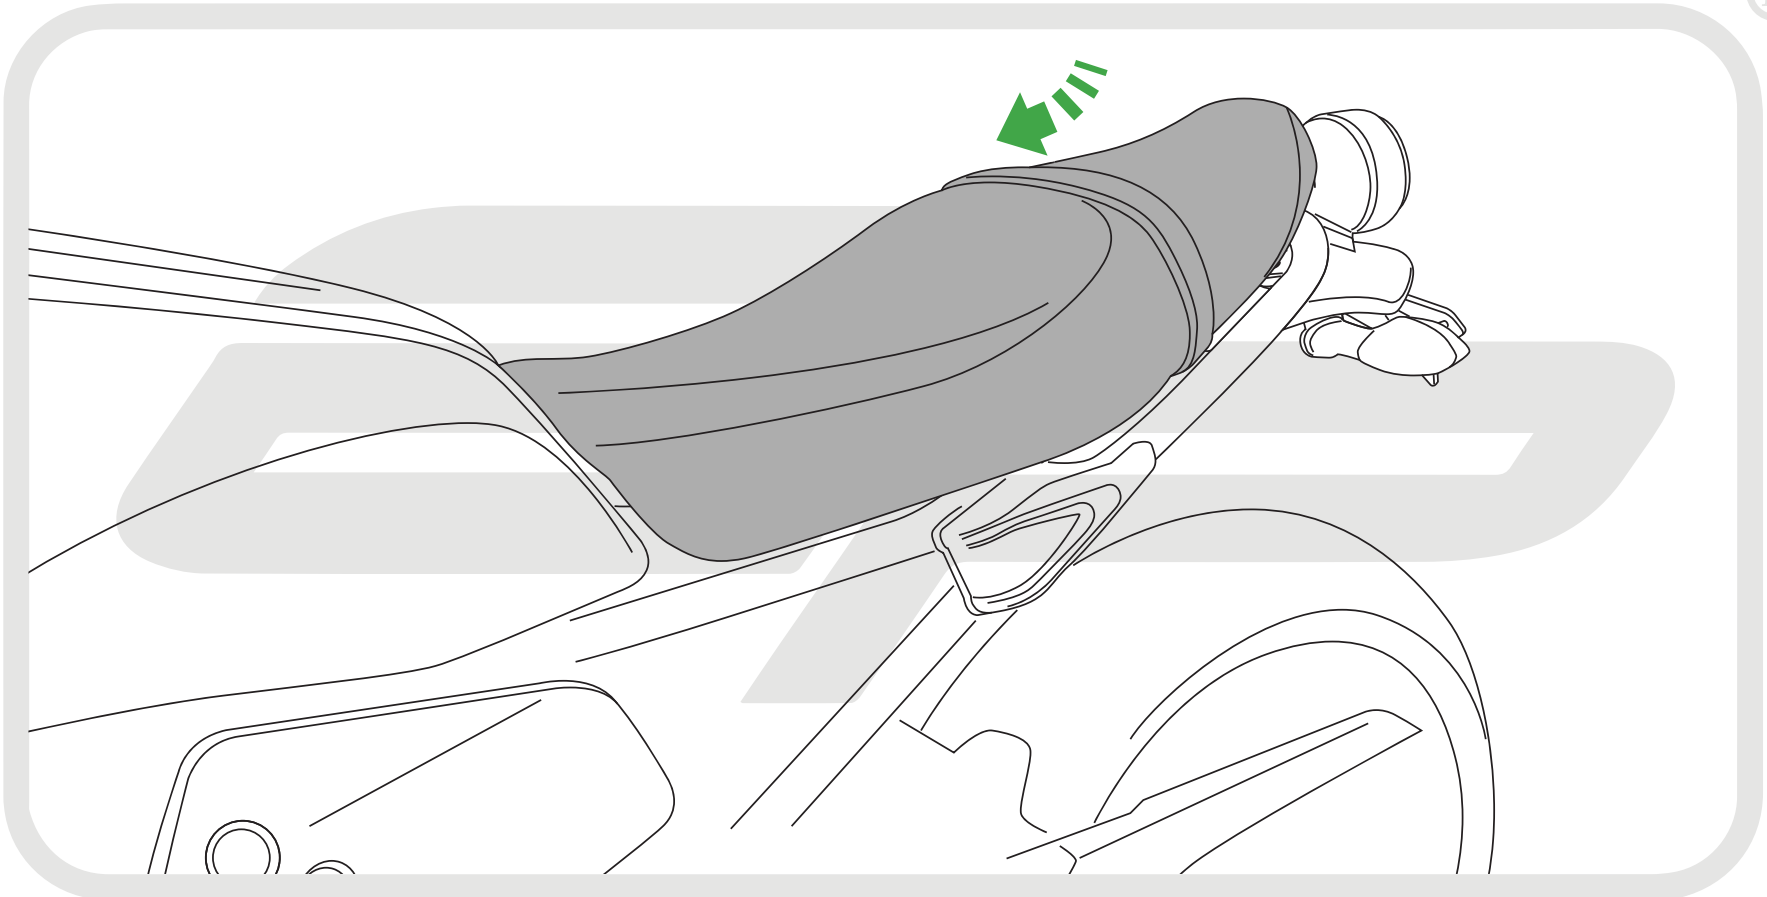

EVOTECH®
PERFORMANCE

Reflector Bracket Installation

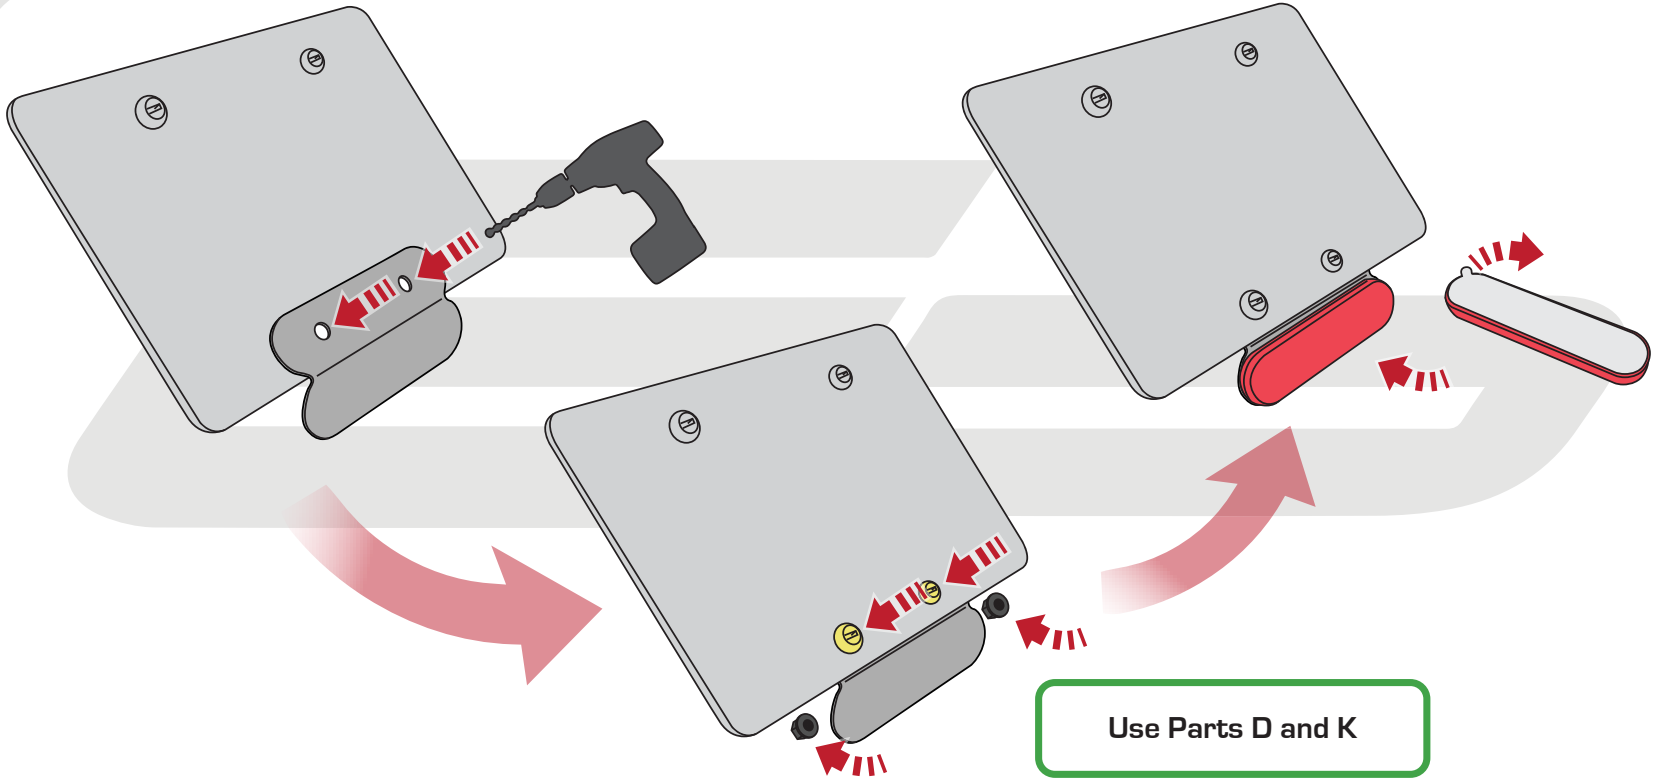

EVOTECH®
PERFORMANCE

ESSENTIAL CHECKS

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.
Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.
It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®

PERFORMANCE

www.evotech-performance.com